

INSTALLATION INSTRUCTIONS

THREE HANDLE WALL-MOUNT SHOWER MIXER 三把手嵌牆式淋浴組安裝說明

CAUTION : Risk Of Product Damage.

注意：為增加產品使用壽命，請依說明清潔供水管路。

When finished installation, turn the valve on and run for 1 minute before using.

完成安裝後，需在使用前先把供水開關全開排水持續一分鐘。

NOTE: Unscrew the **Handles** and **Handle Plates** from the **Mixer Valve Body** First. Using the **Sleeves** provided to protect the external threads while installation if required. (Fig.1)

注意從包裝盒中取出；安裝前，先將把手與把手面板從牆壁內本體鬆開取下。如須使用保護套保護陶瓷中心栓及螺牙，必須在安裝程序前先套上。

1. Pay attention to minimum 2.5" (6.3cm) and maximum 3.5" (8.8cm) dimensions for mounting Information as Fig.1 shown.

如圖.2所示牆壁內本體與完工牆面的距離須保持在最小2.5"(6.3cm)到最大3.5"(8.8cm)之間，此為安裝時的必要條件。

2. **Install Mixer Valve Body and Shower Lines.** (Fig.3) **a/.** Connect hot and cold water supply lines. (Hot water at left side usually) **b/.** Install shower line, use 1/2" plug place in upper opening if not used. **c/.** Compound or tape all connections, Assemble 1/2" pipe and 1/2" pipe elbow into **Mixer Valve Body**.

安裝牆壁內本體和淋浴供水管線。(如圖示3) **a/.** 連接冷熱水供水管線(通常熱水是安置在左邊水道)。 **b/.** 裝置淋浴供水管線，如果暫時不予使用，請用1/2"管塞塞住出水口處。 **c/.** 先將所有接頭塗上管牙膠或包覆止洩帶，再組裝1/2"水管上端到牆壁內本體，同時並組裝1/2"彎頭到1/2"水管的下端。

3. Place **Showerhead Flange** over the thread-end of **Showertube** before install, apply pipe compound to both ends of **Showertube** and 1/2" elbow outlet, install **Showertube** into elbow, and install **Showerhead** to the other end of showertube. (Fig.4)

將法蘭蓋從淋浴管的接牆壁端套入，再將其接牆牙端與牆內1/2"彎頭內牙，塗上管牙膠或包覆止洩帶，接好鎖緊，最後裝上淋浴頭，即可完成淋浴噴頭安裝。

4. Apply pipe compound to nipple and elbow, then install the **Spout**. (Fig.5)

塗佈管牙膠或包覆止洩帶在牆內1/2"彎頭內牙及中間接頭的1/2"牙，再將出水口組裝上去即可完成出水口安裝。

5. Attach **Handle Plates** onto **Handle Shanks** by tool. (Fig.6)









將把手面板套入牙管並鎖緊。

6. Cut overlong **Valve Stems** to certain length (1.4" ~1.5" or 3.6cm ~ 3.9cm) as shown for fix handles. (Fig.7)

依需要切除凸出牆壁過長的閥心軸(凸出牆面1.4"~1.5"或3.6cm~3.9cm),以便於組裝把手。

7. Press **Handles** over the **Valve Stems** to proper position, than tighten setscrews, and insert **Rubber Plug** in place. (Fig.8)

將把手裝入閥心軸到適當位置，再鎖緊理頭螺絲，並裝入橡皮塞。

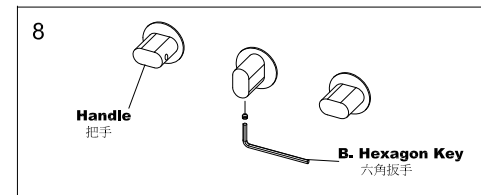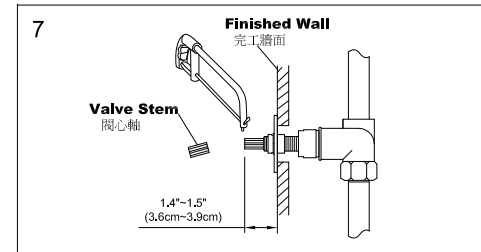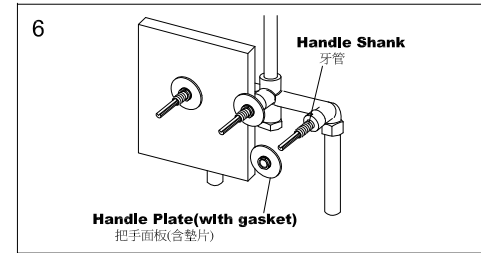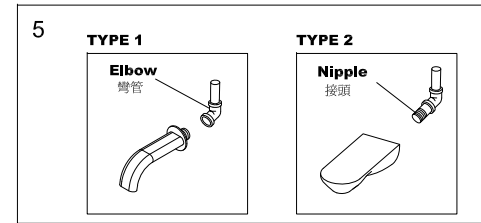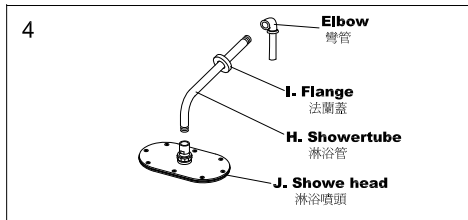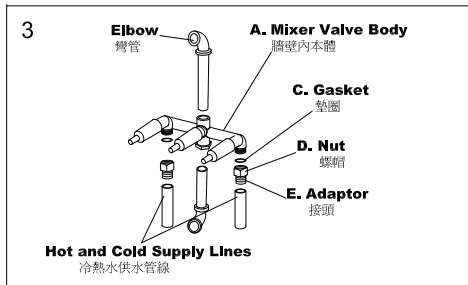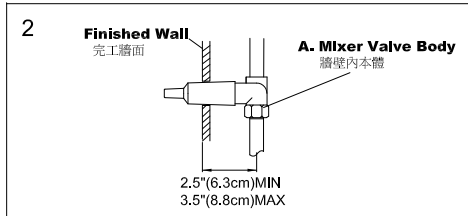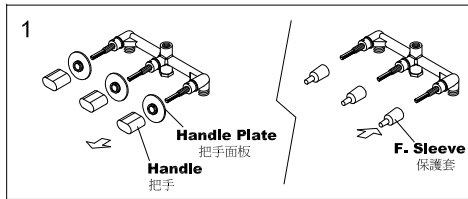

FIXING CONTENTS

組配件內容

