


## **INSTALLATION INSTRUCTION for Two-Handle Bathtub Faucet with Hand Shower**

- 1. Drill 4 holes on appropriate position as shown in figure 1. 如Fig. 1 所示在適當的位置鑽4個孔。
- 2. a. Disassemble Lock-Nut, Washer & Spout Connector from Spout before installing as shown in figure 2.
- 如Fig. 2 所示組裝前將螺帽(本體)及墊片(本體)及出水口連接四通從出水口拆下.
- b. Disassemble **Handles** and **Valve-Nuts** from **Valves** before installing as shown in figure 2. 如Fig. 2 所示安裝前將把手與閥體螺帽從把手閥體拆下.
- c. Disassemble **Lock-Nuts** and **Gasket** from **Base** before installing as shown in figure 2. 如Fig. 2 所示安裝前將固定螺帽及墊片從基座上拆下.
- 3. a, Insert the **Spout** through the Ø35.0~40.0(1.38"~1.57") hole , then secure **Spout** by tightening Lock-Nut with Washer as shown in figure 3.
- 如Fig. 3 所示將出水口穿過Ø35.0~40.0(1.38"~1.57")的孔, 然後鎖緊固定螺帽和墊片來固定連接管.
- b. Insert the **Valve Bodys** from below through the  $\emptyset$  35.0~40.0(1.38"~1.57") holes and fasten the Valve-Nuts, then secure the Valve Bodys by tightening the Lock-Nuts with Washer . Before fasten **Handles**, ensure that lever handle's are properly aligned when **Valves** are in closed position. Then, tighten **Handles** as shown in figure 3

如Fig. 3 所示將把手閥體從下方穿過∅35.0~40.0(1.38"~1.57")的孔並且鎖入閥體螺帽, 然後鎖緊 固定螺帽和墊片來固定把手閥體.固定把手前,當閥體關閉時確定一字把手成水平方向對齊.鎖緊把手.

- c. Place the **Base** above the  $\emptyset$  22.0~28.0(0.87"~1.10") holes and secure by tightening the **Lock-Nut** with **Washer** as shown in figure 3.
- 如Fig. 3 所示將基座放在Ø22.0~28.0(0.87"~1.10")的孔上並且鎖緊固定螺帽和墊片來固定基座.
- 4. a. Connect Valve Bodys to Spout Connector and water supplies with Flexible Hoses as shown in figure 4.
- 如Fig. 4 所示用不銹鋼軟管連接把手含閥體到出水口連接四通及供水口.
- b. Connect Spout Connector and Hand Shower with Flexible Hoses and **Shower Hose** as shown in figure 4.
- 如Fig. 4 所示用不銹鋼軟管及蛇管連接出水口連接四通及手持花灑.

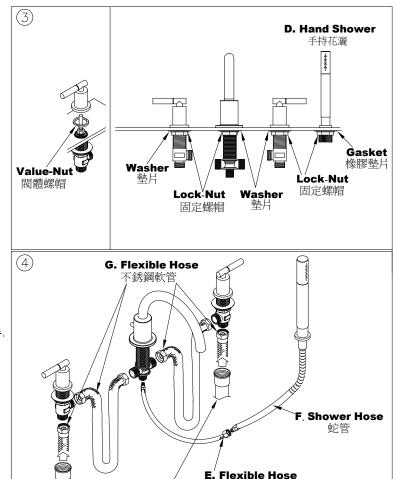

## **FIXING CONTENTS**

Lock-Nut

Lock-Nut

組配件內容



JUSTIME | 巧時代 | ST SHENG TAI BRASSWARE CO., LTD.

Gasket

Washer

金屬墊片

www.justime.com

MADE IN TAIWAN

water supplies 供水口